
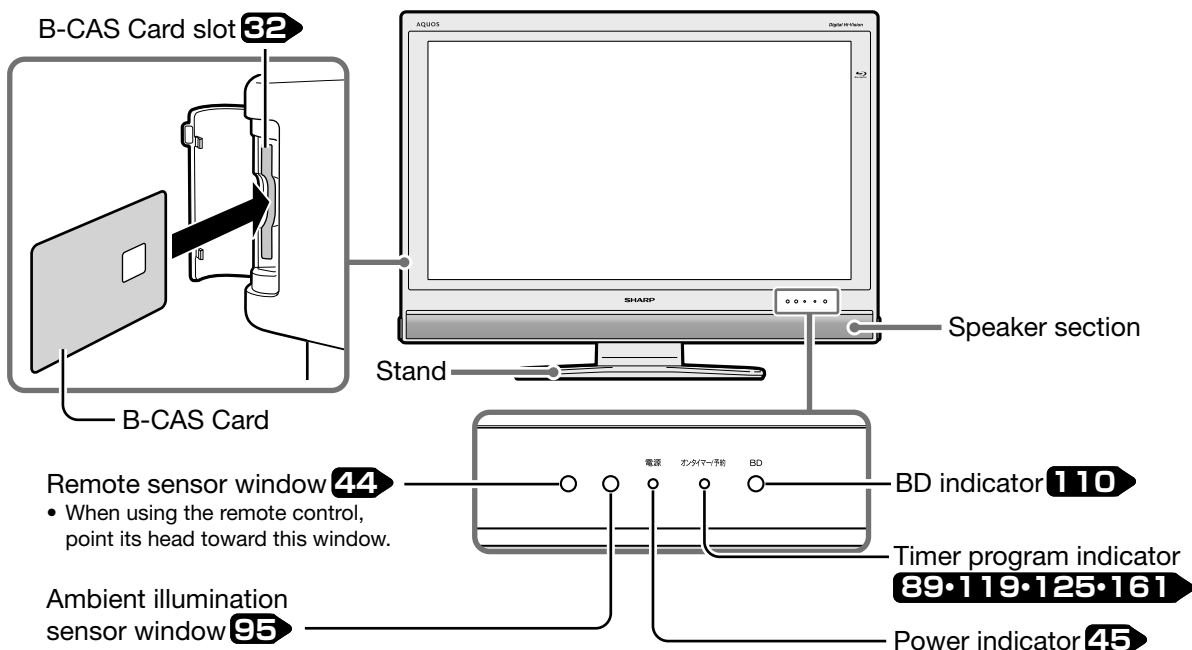


Part Names – Main Unit English Guide

- The number shown in each  is the page number where the part's function and/or use are explained in Japanese.

Front view




Adjusting the LCD panel angle **35**

- The LCD panel can be rotated horizontally up to 20° clockwise and counter-clockwise.
- Hold the stand firmly when you adjust the monitor's angle.

Control panel

Right side view

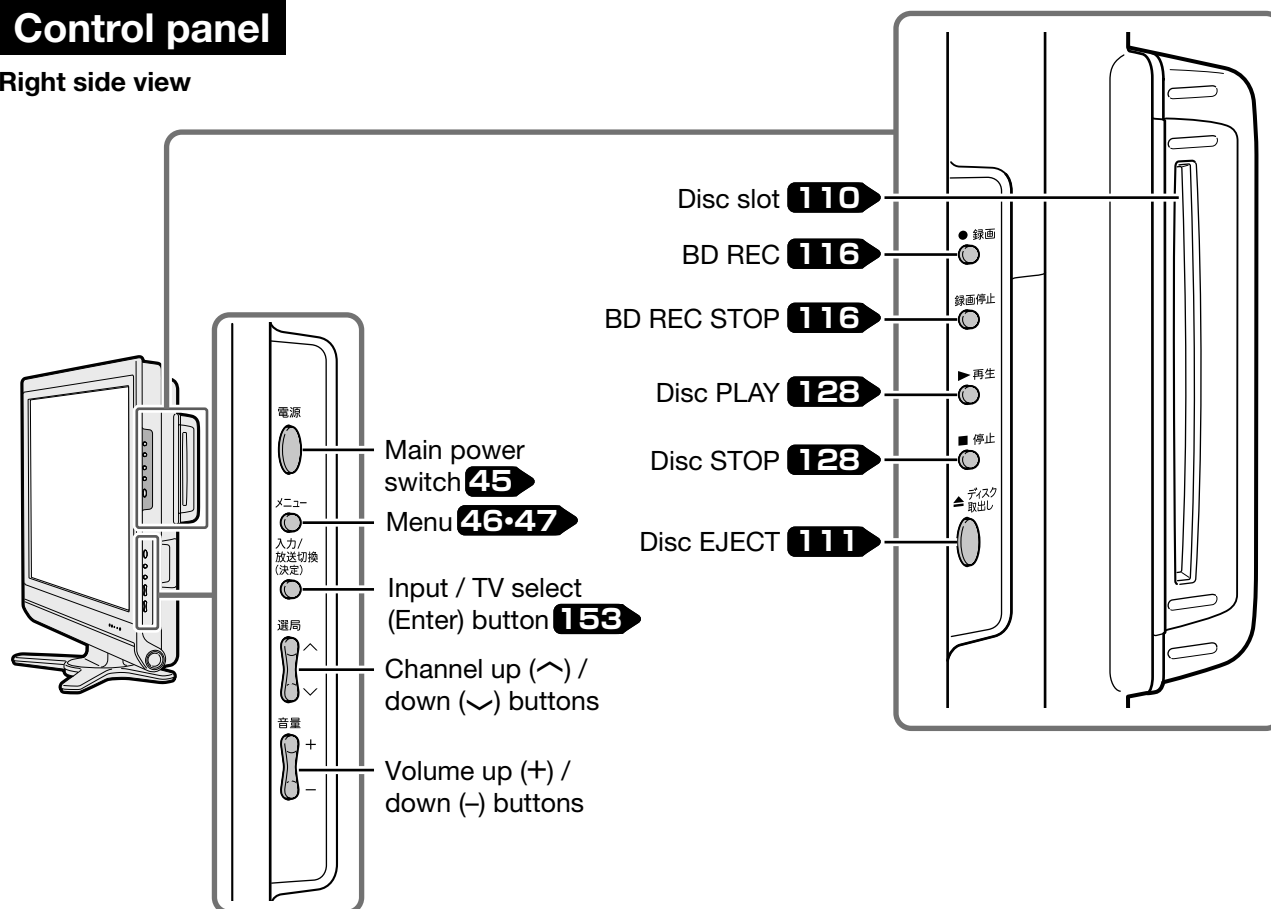

Back view

The illustrations below are those of LC-32DX1.
LC-26DX1 has the same layout of jacks and terminals as LC-32DX1.

Digital audio output jack
(optical) **157・168**

RS-232C **178**

LAN jack
(10BASE-T/100BASE-TX)
183

Monitor out
(REC OUT) **169**

Connect a Blu-ray Disc
player, AV amplifier, etc.

AV in 1・2 (HDMI)
**150~151・152・
157・166・170**

Connect the telephone line

Telephone line jack **183**

PC input (audio)
170~171

AV in 5 (PC) **171**

AV in 3
150~151・166

AV in 4
150~151・166

Connect the AC cord

AC cord connector
(AC 100V) **41**

Headphones jack

VHF-UHF antenna
input terminal
36~39

BS-CS 110 antenna
input terminal
37~39

The provided power
connector may have
different shape from that
shown in the drawing.

(LC-32DX1 only)

Part Names – Remote Control Unit

Active/Standby **45**

Press to engage the TV set in the active or standby mode.

Channel select **73**

- Press to select a channel.
- Use to input a number for various settings.

Terrestrial analog/Terrestrial

Digital/BS/CS **72**

Select the CS digital channel for the first time. **51**

Linked data broadcast

76 • 88 • 136

Mute **73**

Press to temporarily turn off the sound. Press again to return the sound volume to the previous level.

Volume up (+)/down (-) **73**

Press to adjust the volume.

EPG **78 • 80 • 118 • 161**

Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast. Select a future program in EPG to set a timer program.

Finish **46**

Press to finish menu operation, etc.
* This button can be conveniently used when you are at a loss during menu or EPG operation, etc.

Other on-air programs **79**

Press to display the EPG for currently on-air programs only (裏番組).


Display **74**

Press to display or turn off the channel call, etc.

Playback programs recorded on a disc **128**

Fast forward, rewind, etc. during playback **134~135**

See Page 72 for how to select a program.

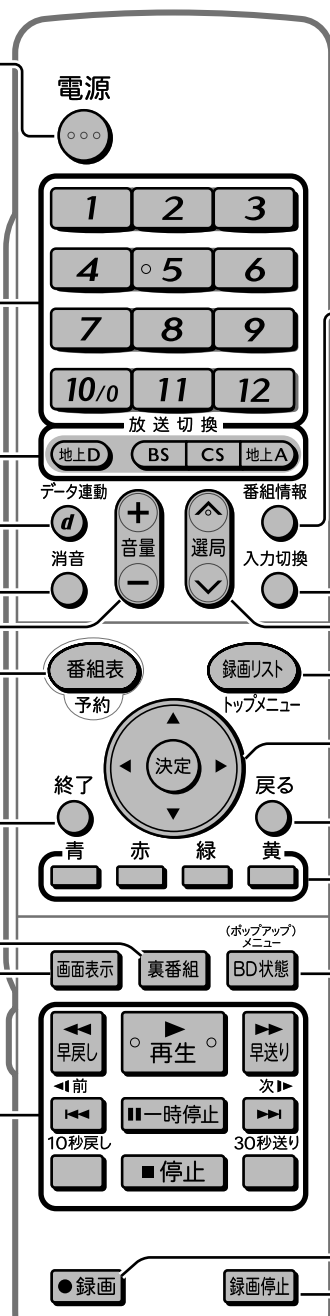

Program info **87**

Input select **153**

Channel up (^)/down (v) **73**

Press to select channels in the current network, media and CATV channels in the ascending or descending order.
* CATV channels are factory set to be skipped.

List the programs recorded on a BD

129

Display the Top Menu of the disc

131

Cursor (up, down, left, right) **46**

Enter/Confirm **46**

Return **46**

Color **80~81 • 88**

Use to operate EPGs and data program screens.

View status of the BD **124**

Display the Pop-up Menu (BD) or Disc Menu (DVD) **131**

Buttons under the cover

Hold the cover by the projections () and lift.

AV mode select **93**

Audio select **84 • 85 • 136**

Picture select **85 • 137**

Caption **85 • 136**

Favorite channel select/register **75**

Freeze **86**

Display the Playback Menu **138**

Sleep timer **204**

Screen mode **90 • 172**

Menu **46**

Press to display or turn off the menu screen.

Media select (TV/data) **72**


CATV **76**

Digital channel number input **75**

Eject the disc **111**

Familink **160 • 162~165**


Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.

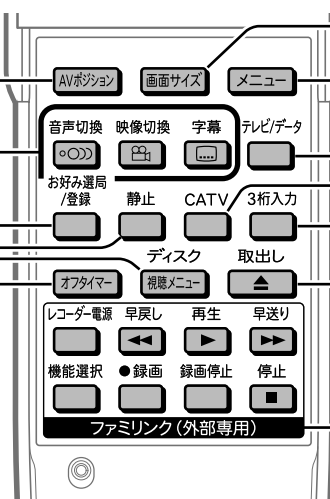

Switching the Display Language to English メニューなどの言語を英語にする

- Using the menu screen, you can switch the on-screen display language to English.

メニューなどの画面表示を英語にすることができます。

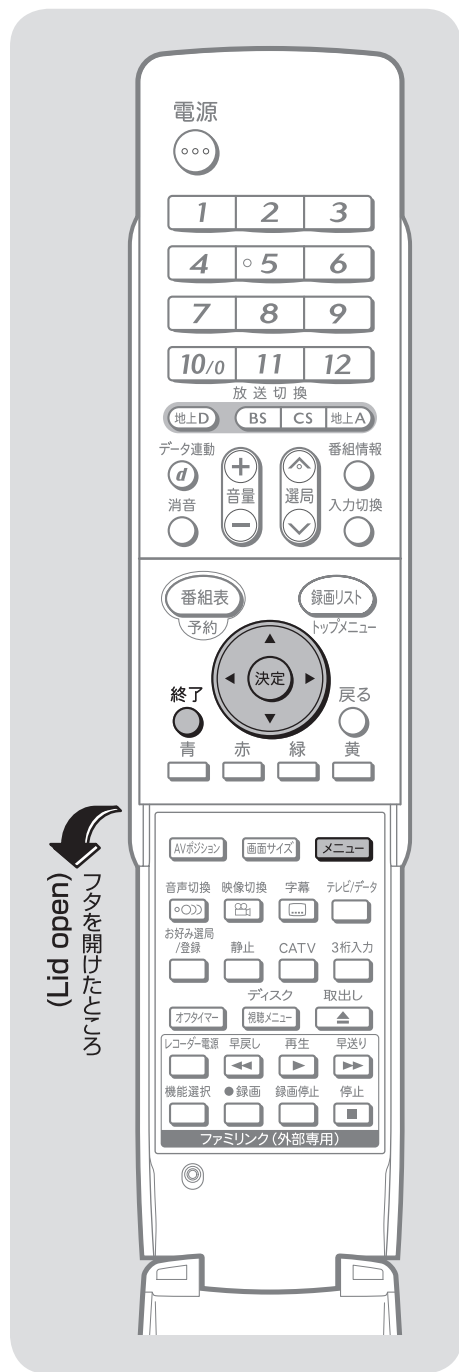

(Lid open)
フタを開けたところ

1

Press
メニュー

Display the menu screen.
メニューを表示する


2

Select with
決定

Press
決定

Select “本体設定” (Setup) — “Language (言語設定)” and Enter.

「本体設定」 — 「Language (言語設定)」を選ぶ

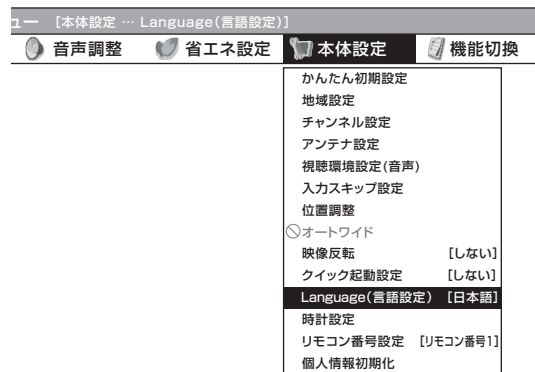


3

Select with
決定

Press
決定

Select “English” and Enter.

「English」を選ぶ

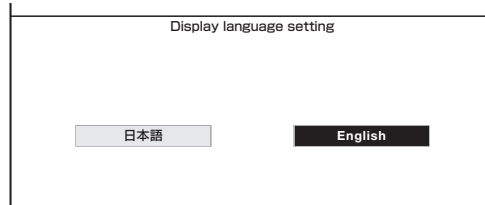

- The menu screen is now displayed in English.
- 画面表示が英語になります。

4

Press
終了

Finish this operation.

終了する

はじめに

準備

番組を見る

機能で録画・再生
BDレコーダー

ハイブリッドレコーダー
パソコンなどにつなぐ

ファミリンク
で録画・再生

本機の機能の
活用

故障かな・仕様・
寸法図など

English
Guide



お知らせ

誤ってメニューを英語にしてしまったときは

- メニューから「Setup」 — 「言語設定 (Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。